

rEvoDream P5 chart



1P wake up

1 cell

2 cells

alternate every 3 Seconds, also on HUD

3P calibrate

mV 1st cell calibrate

mV 2nd cell calibrate

fast blinking : Error

fast green blinking : OK

red : > 64 mV
yellow : < 36 mV

1P adapt seelevel ?

1 cell 1P 1P 1P ... fast green blinking : OK

2 cells 1P 1P 1P ... adapt 2nd cell 1P 1P 1P ... fast green blinking : OK

4P Reset (rEvo1.3 Code)

4x slow fast green blinking : OK switching off

0.3 0.5 0.7 1.0 1.25 1.40 1.45 1.55 1.65

5P (rEvo 1.0 Code)

5x slow confirm ? 1P fast green blinking : OK switching off

0.3 0.5 0.7 0.95 1.10 1.35 1.55 1.65

6P (SCR Modus)

6x slow confirm ? 1P fast green blinking : OK switching off

0.25 0.5 1.45 1.55